



Overview

The IA500 range of switchboards from Iberica de Aparellajes are SF6 full insulated compact design and small dimensions units. All active parts are placed in a sealed stainless steel module filled with SF6 and sealed for life, requiring no maintenance of these active elements.

Each switchboard type IA500 integrates up to 5-line functions and / or protection in a single metal enclosure completely filled with SF6. All these IA500 compact switchboards comprising:

- Stainless steel waterproof metal enclosure, sealed for lifetime in SF6, where all the active parts are located.
- Fuses compartment.
- Controls compartment.
- Low voltage compartment.
- Cable connection compartment.



Main Applications

IA500 switchboards have all medium-voltage functions that allow the operation of medium voltage networks up to 24kV in a compact unit; as well as the power connections and protection of the MV / LV transformers.

Its fields of application are:

- Each IA500 switchboard can be used as switching and protection equipment on the power companies MV / LV transformer stations.
- Inside a private / industrial transformer station, they allow disconnection from the power company to the property and maintains the power company ring network (incoming/outgoing)
- Each IA500 switchboard can be main switching and protection equipment in a MV / BT transformer station for industrial sector.
- There are specific IA500 switchboards for specific applications such as wind power generation.

Key Benefits

- Insensitivity to environmental conditions, being insensitive to temporary flooding (tested at 3 meters under water for 24 hours at 1.1 times rated voltage, insulation test with power frequency).
- High security of operation by having the internal arc test.
- Protection against false operations by means of mechanical interlocking system.
- No maintenance of the active parts is needed as being the insulation in SF6, resulting in minimal maintenance costs.
- Simple operation and use.
- Small dimensions.
- High service availability.
- Gas pressure gauge.

Standards

The IA500 switchboards series meet or exceed the following international standards:

MV Switchboard: IEC 60298 UNE-EN 6029 EXARC sf6 Switch: IEC 60265 UNE-EN 60265 Earthing Switch: IEC 60129 UNE-EN 60129 MV General: IEC 60694 UNE-EN 60694

Fuses: IEC 60282



Functions

IA500 switchboards are formed by combining mainly two types of functions:

Line functions (L): for operating incoming or outgoing of the transformer station, equipped with a switch-disconnector with earthing and voltage indicators.

Protection functions (P): For protection of transformers, equipped with fused switch-disconnector combined with earthing and voltage indicators.

Switching functions (S): For private industrial transformer stations with integrated power company incoming / outgoing functions, equipped with a switch-disconnector with earthing and voltage indicators.

Busbars rising (0L): On models equipped with it, this function incorporates voltage indicators.

ELECTRICAL CHARACTERISTICS


ELECTRICAL CHARACTERISTICS					
Switchboard General	24 Kv	17,5 Kv	12 Kv.		
Standard IEC 60298 UNE –EN 60298					
Rated Voltage	24 Kv	17,5 KV	12 KV		
Rated withstand voltage 50 Hz 1 min.	50 KV	38 KV	28 KV		
Rated withstand voltage 50 Hz 1 min. Across isolating distance	60 KV	45 KV	32 KV		
Rated impulse withstand voltage	125 kV	95 kV	75 kV		
Rated impulse withstand voltage across isolating distance.	145 kV	145 kV 110 kV 85 kV			
Rated current of main circuits	400/630	400/630 A			
Rated current of transformer feeders	200 A	200 A			
Rated short-time withstand current for main and earthing circuits	1s. 12,5 / 16 / 20 KA				
	3s. 12,5 / 16 KA				
Rated peak withstand current for main circuits	31,5 /40	31,5 /40/50 kA			
Rated relative filled pressure at 20 °C and 1013 mbar	0,4 bar				
Permissible ambient temperature	-10°C / -	+ 50°C			
Degree of protection against ingress of solid bodies	IP 3XC	IP 3XC			
Degree of Steel tank protection against ingress of water	IP 67	IP 67			
Protection against mechanical damage	IK 08	IK 08			
SWITCH DISCONNECTOR TYPE EXARC class m1E3 according standard IEC 60265	24 Kv	17,5 Kv	12 Kv.		
Rated Voltage	24 Kv	17,5 KV	12 KV		
Rated withstand voltage 50 Hz 1 min.	50 KV	38 KV	28 KV		
Rated withstand voltage 50 Hz 1 min. Across isolating distance	60 KV	45 KV	32 KV		
Rated impulse withstand voltage	125 kV	95 kV	75 kV		
Rated impulse withstand voltage across isolating distance.	145 kV	110 kV	85 kV		
Rated short circuit withstand current of main circuits		1s. 12,5 / 16 / 20 KA			
		3s. 12,5 / 16 KA			
Rated peak withstand current for main circuits	31,5 /40/50 kA				
Rated mainly active load breaking current	400/630	400/630 A			
Rated closed-loop breaking current	400/630	400/630 A			
Rated cable-charging breaking current	16 A	16 A			
Rated line-charging breaking current	1,5 A	1,5 A			
Earth fault breaking capacity	50 A				
Rated cable and line charging breaking current under earth fault conditions	16 A				
Short circuit making current	31,5 / 40	31,5 / 40 kA			
EARTCHING SWITCH DISCONNECTOR TYPE EXARC Standard IEC 60129	24 Kv	17,5 Kv	12 Kv.		
Short circuit making current	31,5 / 40				
Rated short circuit withstand current of main circuits	1s. 12,5 / 16 / 20 KA				
	3s. 12,5 / 16 KA				
Rated short circuit withstand current of main circuits	31,5 /40	/50 kA			

IMPORTANT NOTE:

Due to technological improvements, all data referenced in this catalog is subject to variations, being this right reserve by Iberica de aparellajes.

Components

- 1. Stainless steel sealed sf6 gas tank
- 2. EXARC rotary switches
- 3. Electrolytic copper busbars
- 4. Fuse chambers for Iberica fuses
- 5. Operation mechanism compartments
- 6. Electrical diagram and operating devices
- 7. Low voltage compartment
- 8. Connection compartment
- 9. Plugin type connectors
- 10. Security flap

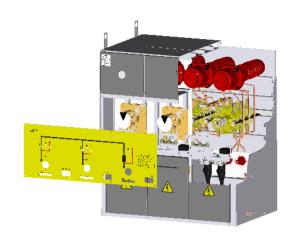

1. Stainless steel sealed sf6 gas tank

The sealed for life stainless steel enclosure, contains all the active parts of the switchboard.

It is completely sealed, being filled with SF6 gas to a pressure of 0.4 bar.

 
Is made of sheet steel 2 mm thick, with a strength test to internal arc of 16kA, according to IEC 60298.



2. EXARC rotary switches

Exarch switches are three position switches, open, closed and earthed, which preclude the possibility of wrong operations. By design, it is impossible for the main circuit and the earthing that they can be closed simultaneously.

The opening, closing and grounding manoeuvres are done using a lever, with independency of the operator's speed. On the protection function (P), the loading of the spring is completed when



performing the closing operation, leaving the circuit ready for an opening through trip coil or the striker pin of the fuse. In this way if there is a defect when closing causing a fuse blown, the operation mechanism will perform an automatic opening of the switch instantly. After an external trigger of the switch it is necessary to move the lever in the direction of opening, even if the switch is already open, loading shunt springs and leaving it ready for the next closing.

The ground or earthing position is interlocked both to the access to line connectors compartments, as to the access to the fuse compartment in the case of a protection function.

3. Copper Busbars

It is manufactured in electrolytic copper.

4. Fuse Chambers

Each protection function has a fuse compartment with three independent plugin fuse bases. The fuse holders are sealed, thus allowing the switchboard to be insensitive to temporary flooding.

The opening door of the fuse compartment is interlocked with the Exarc earthing switch, also there is a second interlock provided by lever.



5. Operation mechanism compartments

In this compartment are located controls that transmit commands to Exarc switches and earthing switches. Mechanisms that made different switchboard interlocks are also located here.

Exarc switch operation mechanism can be manual by lever or can be motorized. On the protection functions (P), when closing the switch it is achieved the storage of energy for the opening, allowing us to do it by tripping coil, or through the striker pin of the fuse when it blows. The operation mechanism of earthing switch will always be manual, by means of a lever.



6. Electrical diagram and operating devices

In this area we find the slots that will allow us through the operating lever operate the Exarc switch or earthing switch. It is provided with a synoptic that allows us to visualize the positions of the switches and the electrical diagram of the connection.

In this same area is also located the voltage indicators.

7. Low voltage compartment

The area where the outlet electrical connections outside of the equipment will take place (auxiliary contacts, coils, etc...).

8. Connection compartment

Here are located the three bushings to connect the line terminals by plug in type connectors. These compartments are independent for each of the functions of the cell. Access to each of these compartments is interlocked with the earthing switch of the same function.



9. Plugin type connectors

It is always plug-in type T-connectors or angled to allow the cable outlet downwards.

10. Security Flap

This rupture disc device ensures the safety of people against a possible internal arc, according to the IEC-60298 (internal arc type test). Located at the bottom of the stainless steel gas tank, this device would actuate in the unlikely event of an internal arc, due to increased pressure that would arise, channeling gas from the rear of the cell, away from the area the operator.



11. Fuses

Fuses according to DIN standard, low power dissipation as type IA37/21 shall be used. Whenever there is a blowing of a fuse it is recommended to replace the three fuses according to standard CEI60282-1. This is because when removing a defect by one fuse blowing, others, which are apparently intact, may have suffered by the action of the short circuit, which may lead to further melting at high risk for weak overcurrent value. This can generate us a new service unavailability that is not required. Attached table to choose the type of IA37/21 fuse of Iberica de Aparellajes, depending on the rated voltage and power of the transformer to protect.

TRANSFORMERS PROTECTION TABLE (CEI 60787/IEC60787)

- 110 010		INOILUI		/ \D	- (5-	001	0171E	50010	,, <u> </u>		
Transformer rated voltage (kV)		3	5	6	10	13,2	15	20	25	30	
Nominal rated fuse voltage (kV)			12	12	12	12	24	24	24	36	36
			it Most adequate fuse nominal current (A)								
transformer (kVA)	voltage	limit time									
50			25	16	10	10	6,3	6,3	6,3	6,3	
75			32	20	16	10	10	10	6,3	6,3	6,3
100	4%		40	25	25	16	10	10	10	6,3	6,3
125		2 sec.	50	32	25	16	16	16	10	10	6,3
160			63	40	32	20	16	16	16	10	10
200			80	50	40	25	20	20	16	16	10
250			100	63	50	32	25	25	20	16	16
315	1		125	80	63	40	32	32	20	16	16
400	1			100	80	50	40	40	25	20	20
500					100	63	50	40	32	25	25
630					125	80	63	50	40	32	32
800	5%	3 sec.				100	80	63	50	40	40
1000						125	100	80	63	50	40
1250							125	100	80	63	50
1600	6,25%	4						125	100	80	63
2000		4 sec.							125	100	80

OPTIONAL ELEMENTS

Motorization

It can be done the motorization for (L) functions switches. It will never do the motorization for the earthing switch. Any of the functions that can be considered appropriate to be motorized can be performed. This motorization can be performed in most common voltages, 24 Vdc, 48Vdc, 110Vdc, or 220 Vac.

Auxiliary Contacts

Auxiliary contacts can be placed for the status display, both the Exarc switch, and the earthing switch. These contacts may be either normally open and normally closed ... The number of contacts are defined according to customer needs. These contacts are always needed whenever you want to perform electrical interlocks.

Tripping coil opening

The protection functions (P) are equipped with an emission opening coil with voltage at 230 Vac. For any further tension should be consulted.

Manometer

IA500 compact switchboards can be equipped with pressure gauge.

Bottom frame

The switchboards of the IA500 range can be equipped with a frame base of 400 mm height. With it you can avoid having to make the execution of pits for the cables connection.

Mechanical interlocking by key lock

On request mechanical interlocking can be made associated to the main switch or the earthing switch. For the (P) function of transformer protection, it is convenient to associate an interlock between the door of the transformer and the earthing switch. This lock can also be associated with the low voltage switch of the transformer.

Accessories

Indirect protections relays

Indirect protections type IA50, can be added on request. They are connected through three toroid current transformers and associated with the fuse protection switch they have functions against overload (51), versus small earth faults (51N) or against large earth faults (50N). Instant actuation in constant time or inverse time. The 50 function is covered by the action of the fuses. More information on indirect protection relays catalog.

Earth fault indicators

It is an instrument which can be known by means of three led lights the values of the current that has been the defect to earth.

Short circuit indicators


After an earth fault, the display continues to tell us on what phase has occurred, until the indicator resets.

Other options: consult your particular case.


RANGE: TYPES, DIMENSIONS AND WEIGHTS

RMU	TYPE	IA500						
		Width (mm)	Length (mm)	Height (mm)	Weight (Kg)			
IA510	2L+1P	1139	788	1285	268			
IA515	3L+1P	1549	788	1285	540			
IA520	2L+2P	1549	788	1285	540			
IA525	3L+2P	1899	788	1285	600			
IA535	4L+1P	1899	788	1285	600			
IA530 44/2	2L+S extensible with Sf100 series	831	803	1755	368			
Wind Power Unit	TYPE	IA500E						
		Width (mm)	Lenght (mm)	Height (mm)	Weight (Kg)			
IA500E	0I+1P	1139	788	1435	330			
IA505E	0L+1L+1P	1139	788	1435	350			
IA510E	0L+2L+1P	1139	788	1435	368			
All wind power RMU's has the outlet cable connection on the top of protection function								

ELECTRICAL DIAGRAMS

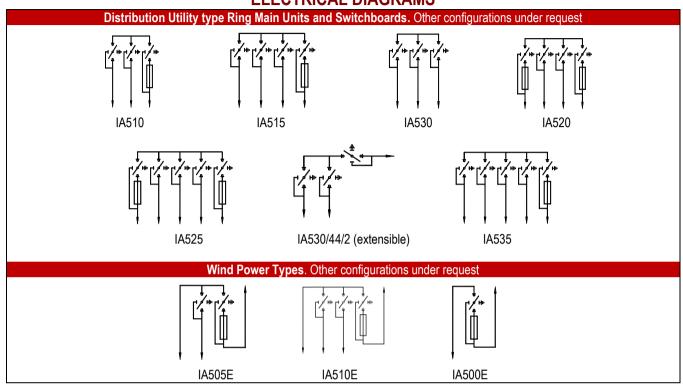

HOW TO ORDER

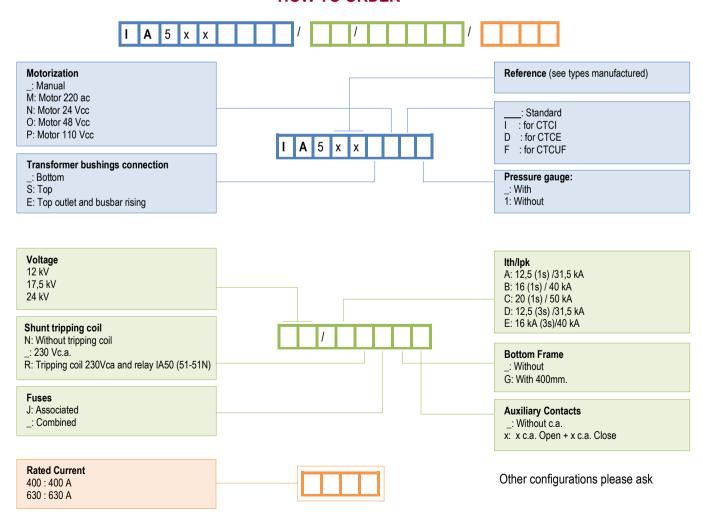





CONTACTE CON NOSOTROS THUS

Camino del Mar, s/n. Tel: +34 96 145 20 46 Fax: +34 96 145 22 10 E-46130 MASAMAGRELL (VALENCIA) ESPAÑA

Web: http://www.iberapa.es • e-mail:iberapa@iberapa.es • CONTACTEZ-NOUS

Software de calculo de proyectos eléctricos disponible en Internet

Descargue nuestros catálogos actualizados en Interno Download our updated catalogues from internet Déchargé nos catalogues actualisés d'Internet